

OGETHER, GREAT THINGS HAPPEN.



One System, One Service, One Provider... The Whole Solution



Polycom[®] SoundStation[®] IP 5000 Phone

Quick User Guide

Basic Phone Features Customizing Your Phone

Applies to phones running SIP 3.2.3 or later

For detailed information please consult the Star2Star Phone and Features Guide. available for view/download via the Star2Star Web Portal at:

https://portal.star2star.com/

©2010 Polycom, Inc. All rights reserved. POLYCOM®, the Polycom "Triangles" logo and the names and marks associated with Polycom's products are trademarks and/or service marks of Polycom. Inc. and are registered and/or common law marks in the United States and various other countries. All other trademarks are property of their respective owners. No portion hereof may be reproduced or transmitted in any form or by any means, for any purpose other than the recipient's personal use, without the express written permission of Polycom

BASIC PHONE FEATURES

Placing Calls

, enter the phone number. and then press the Send soft key.

Answering Calls

Press the **Answer** soft key or



To ignore an incoming call, press the Reject soft kev.

To prevent your phone from ringing, enable Do Not Disturb. See Using Do Not Disturb.

Ending Calls

During a call, press End Call soft key.

Muting the Microphone

During a call, press The console LEDs will glow red.

You can hear all other parties while Mute is enabled. The other parties cannot hear you.

To turn off Mute, press



Holding and Resuming Calls

During a call, press the Hold soft key. The console LEDs will blink red.

To resume the call, press the Resume soft key.

Redialing Numbers

To call the last number you dialed,



Transferring Calls

To transfer a call:

- 1. During a call, press the **Trnsfer** soft key. The active call is placed on hold.
- 2. Enter the number of the party to which vou want to transfer the call, and then press the **Send** soft key.
 - To cancel the transfer before the call connects, press the Cancel soft key. The original call resumes.
- 3. When you hear the ring-back sound, or after you speak with the second party, press the Trnsfer soft key.

You can automatically transfer the call without speaking to the second party. After you complete step 1, press the Blind soft key. Then, complete step 2.

Forwarding Calls

To enable call forwarding:

- 1. From the idle screen, press the Forward soft key.
- 2. Select the forwarding type you want to enable:
 - · Always -To forward all incoming calls
 - No Answer -To forward all unanswered incoming calls.
 - . Busy To forward calls that arrive when you are already in a call.
- 3. Enter a number to forward calls to. For No Answer, enter the number of rings before forwarding.
- 4. Press the **Enable** soft key.

To disable call forwarding:

- 1. From the idle screen, press the Forward soft key.
- 2. Select the forwarding type you want to disable.
- 3. Press the Disable soft key.

Forwarding Calls (contd)

Use the Star2Star Find-Me / Follow-Me feature in the Star2Star Web portal. Follow Me (Immediate) -- Calls to your extension will be sent automatically to the number vou define.

Find Me (Sequential) -- Calls to your extension will ring your extension and any other numbers that you define, in order. Find Me (AII) -- Calls to your extension will ring your extension and any other numbers that you define, all at once.

LOCAL CONFERENCE CALLS

To create a three-way local conference call:

- 1. Call the first party.
- 2. After the first party answers, press the Confrnc soft key. The active call is placed on hold.
- 3. Enter the number of the second party. and then press the **Send** soft key.
- 4. When the second party answers, press the Confrnc soft key. All parties are now joined in the conference. You can do the following:
 - · To put the conference on hold. press the Hold soft key. To resume the conference, press the Resume soft kev.
 - To end the conference, press the End Call soft key. (The other parties will remain connected.)
 - To end the conference and split the conference into two separate calls on hold, press the Split soft key.

If you have an active call and a call on hold, you can create a conference between all three parties by pressing the Join soft key.

Page 1 of 2

Using Do Not Disturb

To prevent your phone from ringing,

enable Do Not Disturb. Press , and then select Features > Do Not Disturb. (Note) callers will be directed to Voice Mail or the Star2Star Find-Me / Follow-Me feature if invoked. Calls to the phone with the DND feature invoked will appear as Missed calls.

Using Call Lists

From the idle display:

- Press to access the Placed Calls list.
- Press to access the Received Calls list.
- Press to access the Missed Calls list

Select a call from the list. Then, you can do the following:

- To place a call, press the **Dial** soft key.
- To change the phone number before dialing, press the Edit soft key.
- To remove the call from the list, press the **Clear** soft key.
- To store the contact in your Contact Directory, press the Save soft key.
- To view information about the call, press the Info soft key.

Accessing Voice Mail

An icon on the phone screen, the three LEDs flashing red, and a stutter dial tone may indicate new voice mail messages.

To listen to voice mail messages:

- Dial 1000 or press , and then select Features > Messages > Message Center.
- Press the Connect soft key, and then follow the voice or visual prompts on the screen.

Contact Directory

To add or edit a contact in your local phone directory:

1. Access the Star2Star Web Portal and navigate to the Individual Phone Settings section for your phone. Click the Speed Dials link to add contacts and other options to your phone. For more detailed instruction follow the Star2Star Phone and Features Guide available for view/download via the Star2Star Web Portal.

To search for a contact:



2. Press the **Search** soft key. Then, enter the first few characters of the contact's first or last name, and then press the **Search** soft key again.

Updating Ring Tones

You can change the ring tone on your phone. You can also set distinctive ring tones for contacts in your Contact Directory.

To change the incoming ring tone:

- 1. Press and then select **Settings** > **Basic** > **Ring Type**.
- 2. Scroll to the ring type you want. To hear the ring type before you select it, press the **Play** soft key.

Adjusting Speaker and Ringer Volume

To change the speaker volume:

• During a call, press (either the volume down or volume up side).

To change the ringer volume:

When the phone is in the idle state,
 press (either the volume down or volume up side).

You can also prevent your phone from ringing (see <u>Using Do Not</u> <u>Disturb</u>), or you can choose a silent ring for your phone (see

STAR2STAR CALL PARK AND RETRIEVE

- 1. Perform an Attended transfer to the park code 7000.
- 2. Listen to the system retrieval code announcement e.g. 7001
- 3. Press Transfer.
- 4. The caller is now parked.
- 5. The caller will hear music or message on hold if configured on your system.
- 6. Dial the system retrieval code e.g. 7001 on any local extension to retrieve the call.

Caller Pickup

1. To pick up a call ringing a specific phone that is not ringing as part of a Ring Group, dial *8xxx (xxx

being the extension of the ringing phone).

2. For example your neighbor's phone

- extension 112 is ringing. You would dial *8112 to pickup that call.
- 3. To pick up a call on any ringing phone dial ${}^{\star}8$.



